


## Cisco 7916 Side Car User Guide

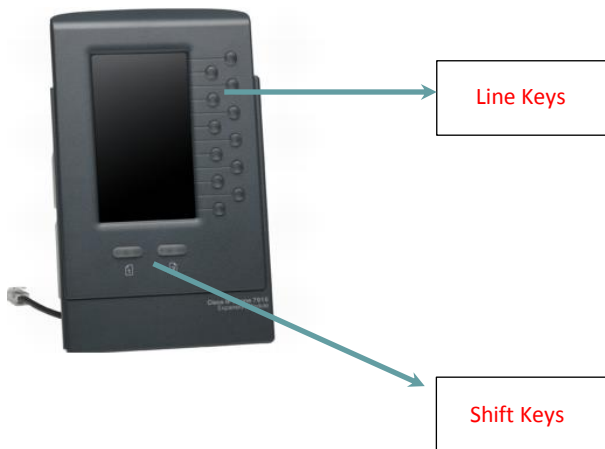

### Busy Lamp Field/Line Buttons

	<b>Green, steady</b> —Active call or two-way call
	<b>Green, flashing</b> —Held call
	<b>Amber, steady</b> —Privacy in use or one-way intercom call
	<b>Amber, flashing</b> —Incoming call or reverting call
	<b>Red, steady</b> —Remote line in use
	<b>Off</b> , line available for use

### Shift Buttons

Shift Buttons—2 buttons.

Each button corresponds to one page of 12 line keys.

Page one is labeled with the number 1 and page two is labeled with the number 2.

The lights beneath each button indicate the state of the page as follows:

- Page is active: steady green light
- Page is inactive: light off
- A call is ringing on an inactive page: flashing amber light

### Call Status Icons

Icon line or call state description:

- On-hook line: No call activity on this line.
- Off-hook line: You are dialing a number.
- Connected call: You are connected to the other party.
- Ringing call: A call is ringing on one of your lines.
- Call on hold: You have put the call on hold.
- Remote-in-use: Another phone that shares your line has a connected call.

### Using a Shared Line

- BLF--monitored line is idle.
- BLF--monitored line is in use.
- BLF--monitored line is ringing (BLF Pickup).
- BLF--Line in Do Not Disturb (BLF feature).
- Idle intercom line—The intercom line is not in use.
- One-way intercom call—The intercom line is sending or receiving one-way audio.
- Two-way intercom call—The recipient pressed the intercom line to activate two-way audio with the caller.