


Cisco 7937 Side Car User Guide

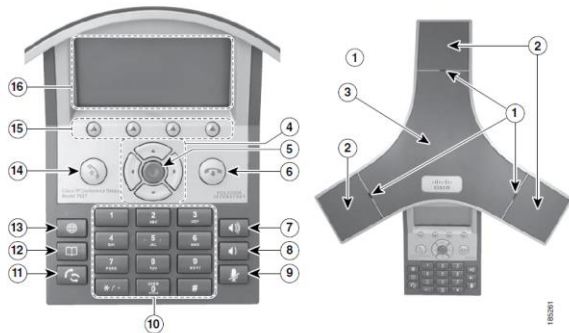

Feature – Functions

1	<p>Three multi-color LED indicators provide call status information:</p> <ul style="list-style-type: none"> •Off: Ready, Call State Off •Solid amber: Powering On •Solid red: Powering On, Mute, or Voice Message •Flashing red: Hold •Solid green: Dial Tone, Dialing, or Connected •Flashing green: Incoming Call (Ringing/Connecting), or Receiving
2	Microphones-Three internal unidirectional microphones
3	Speaker
4	Navigation Button--Allows the user to scroll through menus and highlight items.
5	Select Button--Activates the currently highlighted screen menu option.
6	Disconnect Button--Ends Current Call.
7	Raises the volume of the speaker (off-hook) and the ringer (on-hook).
8	Lowers the volume of the speaker (off-hook) and the ringer (on-hook).
9	Toggles the Mute feature.

Feature – Functions - “Continued”

10	Dial Pad--Allows the user to dial phone numbers.
11	Redial Button Dials the most recent number you called.
12	Directory Button--Access to the Directories menu.
13	Application Button--Access the Messages, Settings, and Services menus.
14	<p>Allows the user to go off-hook to:</p> <ul style="list-style-type: none"> • Invoke a dial tone • Obtain a dial tone to initiate a call • Initiate a call after you enter a phone number • Answer an incoming call • View certain soft keys
15	Allows the user to select soft key options that display on the screen.
16	Displays conference station menus and features.

Call Status Icons

Icon Line or call state Description



On-hook line--No call activity on this line.



Off-hook line--You are dialing a number Connected call.



You are connected to the other party.



Ringing call--A call is ringing on one of your lines.



Call on hold--You have put the call on hold.



Remote-in-use--Another phone that shares your line has a connected call.